


Fixed and Operable Aluminum Window with Trim and Clip and 'T' Mullion Installation Guide M600/700 EdgeVu/EdgeLine/H450/470

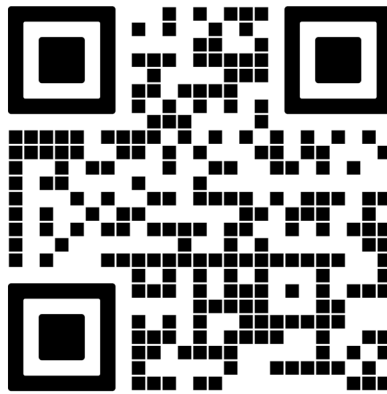

-Scan here for a digital version-

Part # IG-109 - V.1.0 11/17/2025

**Pages 5 to 15 -- Weather Resistant Barrier (WRB) Application
Page 16 -- Liquid Barrier Application (LBA) Application**

If this set of instructions does not match your installation method or the wall conditions of the job site, please check our website listed below for other options, or call Quaker Customer Service for additional information.




Quaker Window Products
504 Highway 63 S
Freeburg, MO 65035
Phone: 800-347-0438
Fax: 573-469-4151
www.quakerwindows.com



Note:

While the details within these instructions are based on the fixed window, the installation and sealing methods also apply to the operable window.


Note: 1" Tall x 1 1/2" Wide Trim/Clip is shown on the details for clarity. Other options are available.

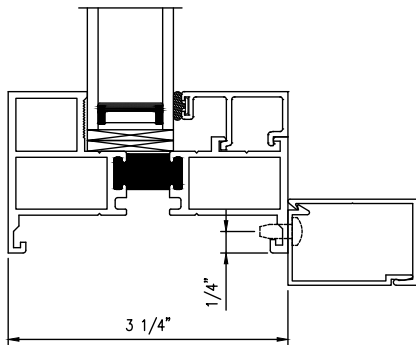


M600/700

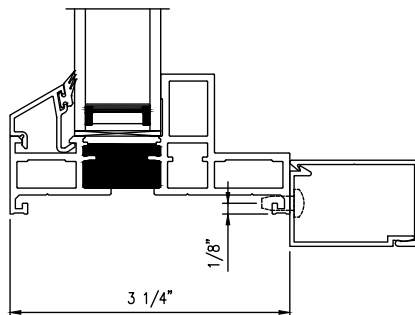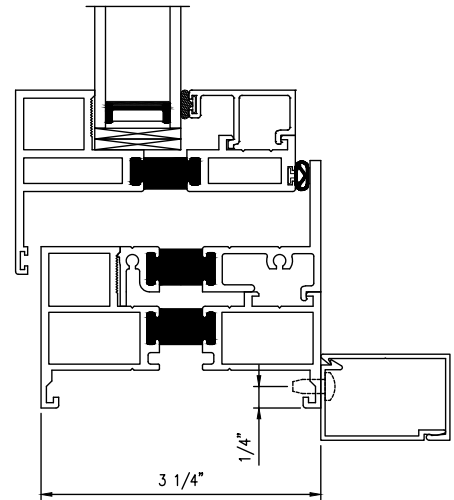




H450/470

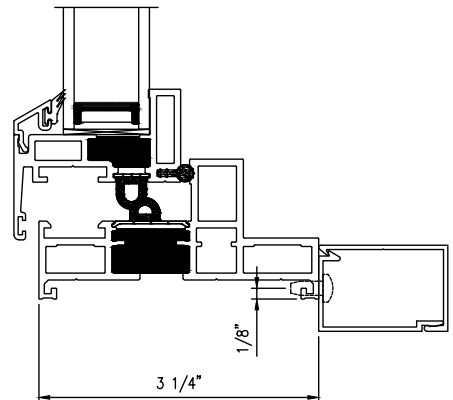

Tools Required by Installer

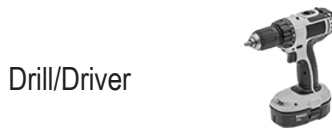

Materials Required by Installer

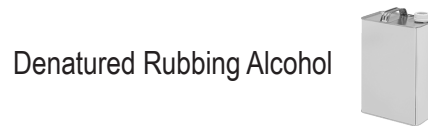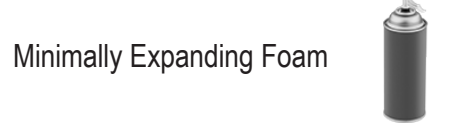

-Carefully read these instructions before starting any installation-

Failure to install and maintain QUAKER® products according to these instructions may void any product warranty. However, these are generic instructions that cover common situations and applications, aspects of which may not be appropriate for all installations due to building design, site conditions, construction materials, or installation methods used. Refer to shop drawings, if applicable, for additional notes and details. Please consult Quaker for specific applications not covered in these installation instructions, or visit our website at www.quakerwindows.com, or call 800-347-0438 for additional information.

Tools

- Follow manufacturer's instructions and safely operate tools, ladders, or scaffolding. Always wear safety glasses. Failure to do so could result in injury, product, or property damage.

Handling

- Do not store QUAKER products outside or in an unprotected, high moisture, or high heat environment prior to installation. Doing so could result in product damage.
- Do not carry, transport, or store QUAKER products in a flat (horizontal) position. Doing so could result in product damage or injury.
- Window and door units should be kept or stored in an upright (vertical) position, with support across the sill to avoid bowing. Do not lay any units in a flat position!

Glass

- If glass gets broken, please exercise caution, as glass fragments can cause lacerations or other injuries. In many areas, local building codes require safety glass to be used in certain applications. All QUAKER products are available with safety glass if they are ordered that way.

Fastening

- Metal fasteners and components could corrode when used in contact with preservative-treated lumber. Use approved and appropriate fasteners and components to fasten QUAKER products in this application. Failure to do so could result in a product performance failure, injury, or property damage.
- Quaker does not provide anchorage or fastener calculations.
- Quaker is not responsible for determining structural adequacy of the anchorage and fasteners used to install QUAKER products, or the openings into which they are installed.

Installation

- Report any damage to dealer immediately. Do not install product if damaged. Quaker is not responsible for addressing products that are damaged after delivery, or product that is installed in a damaged condition.
- Always support window or door products in an opening until fully fastened. Failure to do so could result in the product falling out of an opening and causing injury, product, or property damage.
- Nailing flanges and drip caps (integral or applied) do not take the place of window flashing. All QUAKER products must be properly flashed and sealed with material compatible sealant for protection against water and air infiltration around the entire exterior perimeter. Failure to do so could result in a product installation failure and property damage.
- Windows and doors must be properly shimmed. To properly shim a QUAKER product, follow relevant installation guidelines, and never set a window directly on a sill plate. Failure to shim properly is an installation failure that could result in product performance failure or property damage.
- Construction directly above an opening must be engineered and designed not to transfer loads directly to any windows or doors. If live or dead loads are transferred to a QUAKER product, this may affect functionality and result in glass failure or otherwise damage frame joinery, perimeter seals, or other aspects of the product. Proper construction of the rough opening must take place prior to the installation of the QUAKER product.
- Please confirm that any necessary vertical deflection of the head condition is consistent with the selected QUAKER product. Most QUAKER products are not designed to allow any deflection at the head condition. Shop drawings may indicate the maximum allowable vertical deflection at the head condition of a QUAKER product. If vertical deflection is a concern but shop drawings are not provided, please contact Quaker for assistance.
- Windows and doors have small parts that, if swallowed, could pose a choking hazard to young children. Please dispose of unused, loose, or easily removed small parts. Failure to do so could result in injury or death.
- Do not drill through or into the sill or frame of any QUAKER products, whether to install alarm wires or for any other reason.

Sealing

- Follow supplier instructions for proper application of minimally expanding foam, sealant, water resistant barrier or liquid barrier, and flashing products and systems to ensure safety, proper material application, compatibility, and to understand the need for periodic maintenance for continued weather resistance of their products. Failure to do so could result in product performance failure or property damage.
- Minimally expanding foam insulation must be compliant with AAMA 812.
- If silicone is selected as an appropriate sealant, Quaker recommends using 100% neutral cure silicone sealant, that is ASTM C920 compliant. Always clean and prepare the surfaces where the sealant will be applied per the manufacturer's recommendation. Once applied, properly tool the sealant in place. Failure to do so could result in product performance failure or property damage.
- Flashing tape must meet ASTM-D779 performance requirements.
- Maintain and properly seal a minimum of 1/4" gap (or whatever is specified within these installation instructions or shop drawings) around the perimeter of the window or door frame and the exterior finish materials. Failure to do so could result in product installation failure or property damage.

Joining

- Do not join any Quaker product to another product that is not designed for joining. Joined products must be individually supported in the opening. Failure to do so could affect operation and product performance and could result in a product installation failure or property damage.

Cleaning

- Do not use any cleaning agent other than a mild, non-abrasive window washing solution or glass cleaner applied in accordance with any product labeling instructions and Quaker's care and maintenance instructions. The use of harsh chemicals (such as brickwash, bleach, alcohol, hydrochloric acid, or muriatic acid) for cleaning or other purposes may damage QUAKER products, glass, fasteners, hardware, seals, sealant, or metal flashing. Please protect these products by following the cleaning product's instructions for its proper use.
- Do not use a razor blade to clean a glass surface, as damage to the glass may result.

IMPORTANT



- Buildings constructed prior to 1978 may contain lead paint which could be disturbed during window or door replacement. For more information on proper management of lead paint, go to: www.epa.gov/lead
- Care must be taken to properly recycle or dispose of used or old materials. Any recyclable material should be separated from non-recyclable or hazardous materials. Please consult with local or state authorities regarding proper disposal of non-recyclable or hazardous materials.
- Inspect all window and door units for any damage or defects prior to installation. Contact the nearest QUAKER distributor if there are any problems or issues.
- **WARNING:** This product can expose you to chemicals, including titanium dioxide or methanol, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov
- **WARNING:** Drilling, sawing, sanding, or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for your personal protection. For more information go to www.P65Warnings.ca.gov
- When installation is completed, operable window and door products, and related hardware or equipment, may require some adjustments. Confirming operability and making minor adjustments are within the scope of the installation services performed by others.

With Weather Resistant (WRB) Application (Pages 5-15)

--See FMA/AAMA 100-12 for additional information--




WB1

From the interior, measure and verify the size of the rough opening. The rough opening should be $\frac{3}{4}$ " wider and $\frac{3}{4}$ " taller than the Window Unit, unless otherwise specified on the shop drawings. Verify the rough opening is flat, plumb, level, and square. Take diagonal measurements to check for square. The sill plate beneath the unit must be level for proper unit operation. Go to the exterior and cut the Weather-Resistant Barrier (WRB) in an 'I' pattern.

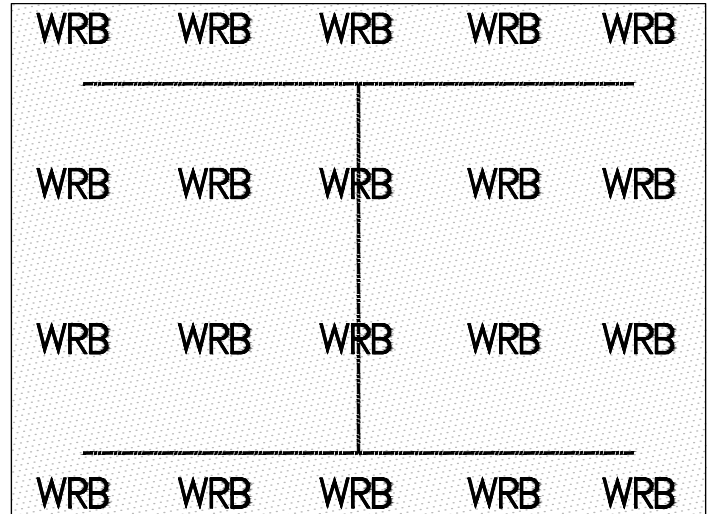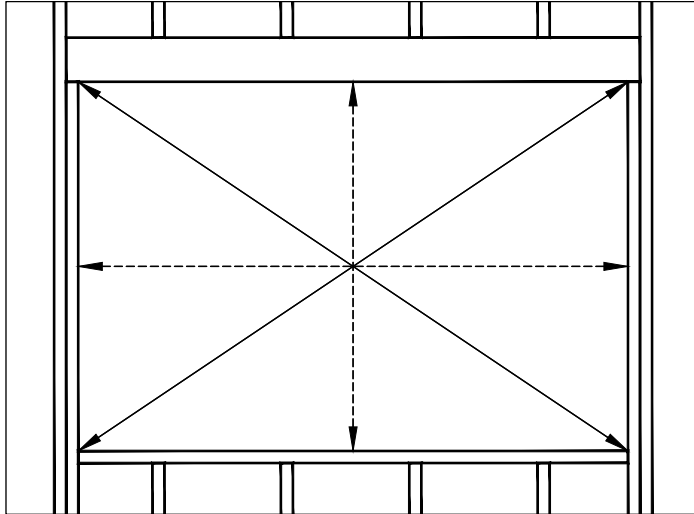

WB2


Fold the WRB sides towards the interior and trim as needed. Do not staple in place. Make 4"-6" horizontal cuts in the WRB at the head and sill jambs. Fold back WRB at the cut lines, and tape into place.

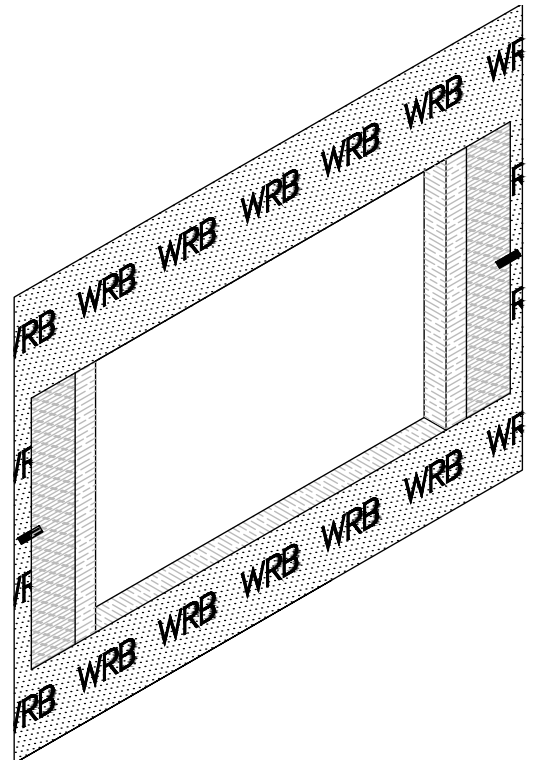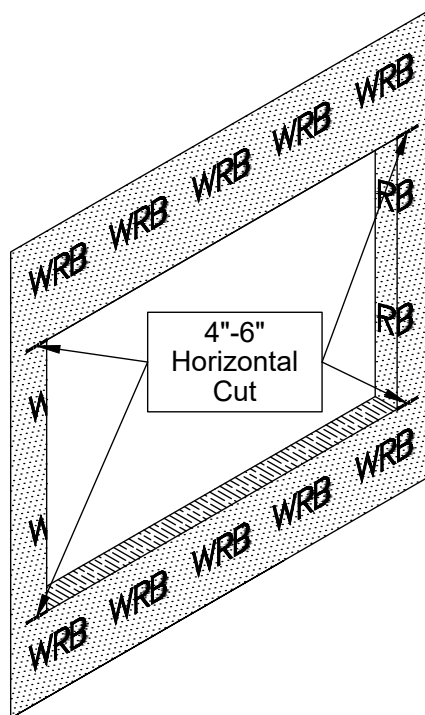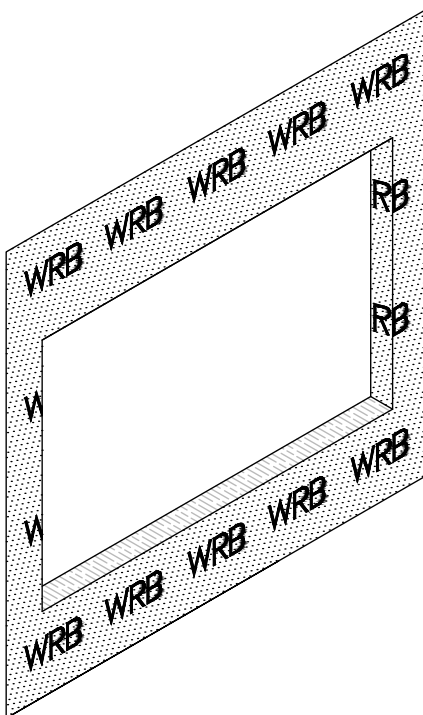

WB3

Measure the width of the rough opening, and cut a length of self-adhering flashing that is 12", or more, than the width of the rough opening. This will allow the flashing to run 6"+ up each jamb condition. Apply the flashing to the exterior side first, allowing for a minimum of 3" below the sill and up each side. The flashing tape must cover the entire sill plate. If needed, apply an additional piece of flashing over the first one with a 1" minimum over-lap. Start from the exterior and work towards the interior. After applying the sill flashing, apply sealant at the jambs where shown. Fold the WRB jamb flaps back into place, over the sill flashing, and fix into place.

Leave head flap in place.

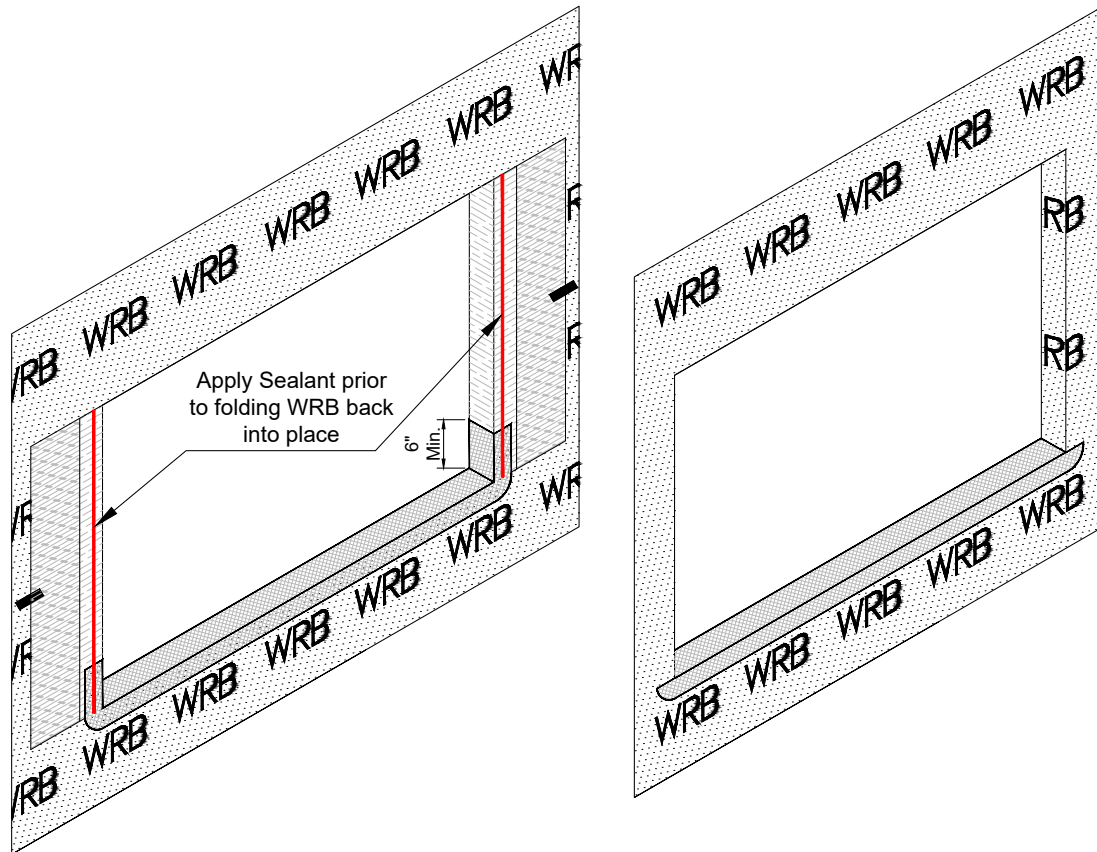


WB4

Before installing the unit in the opening, measure the Window Frame to determine the shim spacing will be equal at the head and sill (normally 3/8" at top and bottom), and equal at each jamb (normally 3/8" at each side).

Apply a Clip portion at the centerline of the head and sill, and to each jamb. Refer to the Shop Drawings or Structural Calculations for fastener sizes (and spacing) then match drill the Window Frame.


If used, insert perimeter frame fillers.

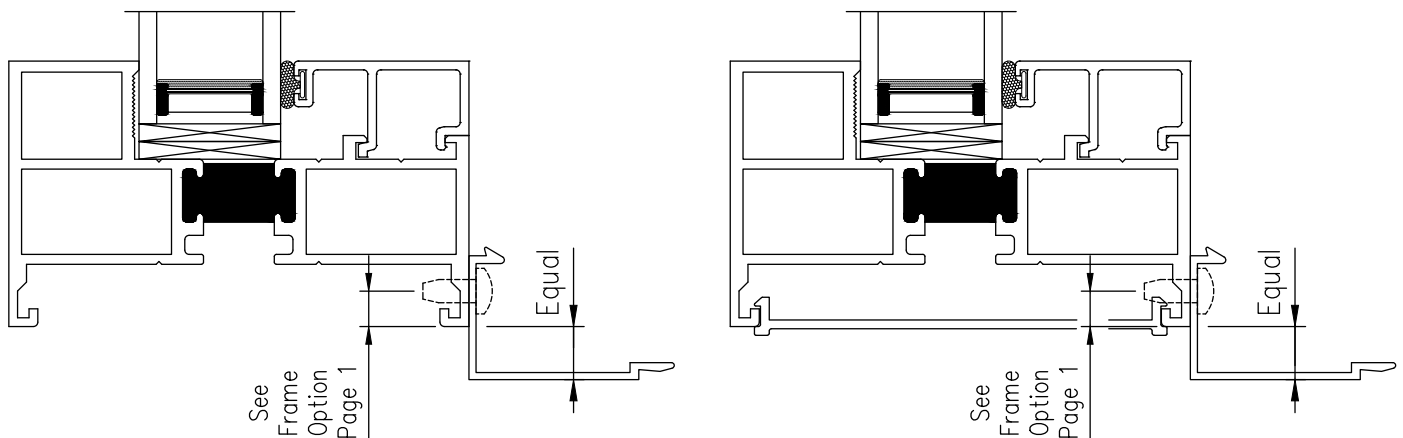

WB5

Install the window unit into the opening. Make sure the Clips will overlap into a structural area of the building with maximum edge distance available. Use plastic shims at all sides to assure the window will remain square and plumb. Fasten the Window frame into place with the appropriate fasteners called out on the Shop Drawings or Structural Calculations.

DO NOT PLACE WINDOW UNIT DIRECTLY ON THE BUILDING STRUCTURE WITHOUT SHIMS.

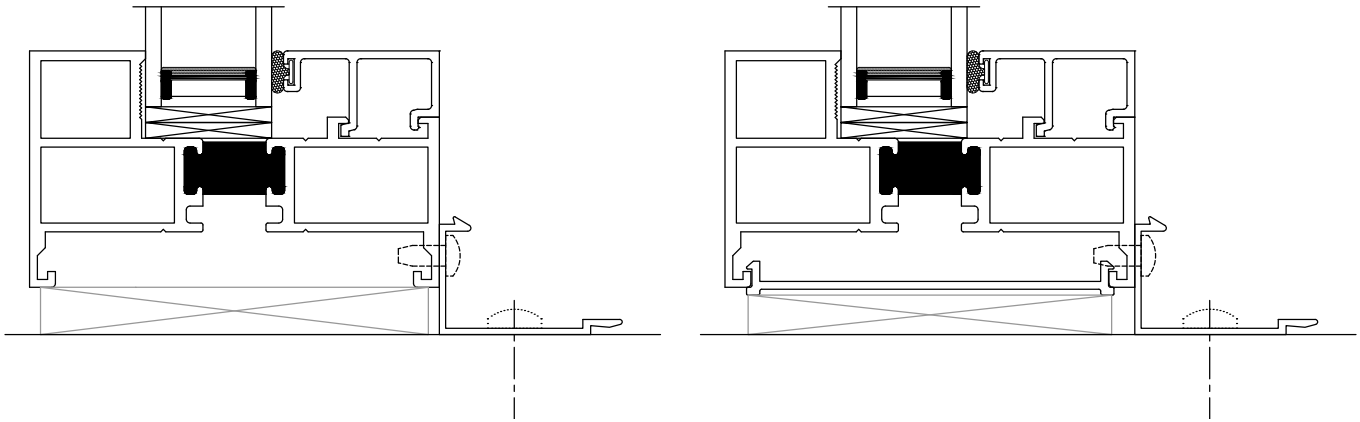


WB6



Below shows the two standard 'T' Mullions used. Unless necessary, only the M24628 will be shown.

If not already done, cut the 'T' Mullion to size (equal to Window height). Apply the attachment angles to the 'T' Mullion. Make sure the gap at the top and bottom are equal to the shim spacing used.



M24628 T-Mullion

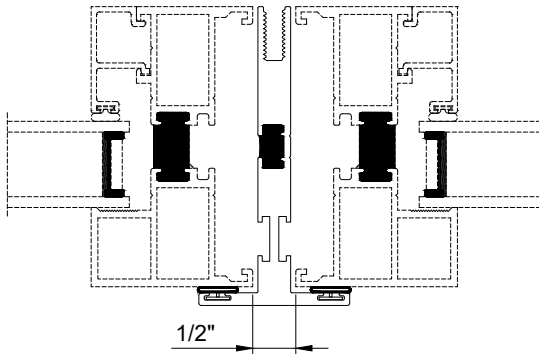

M22126 T-Mullion

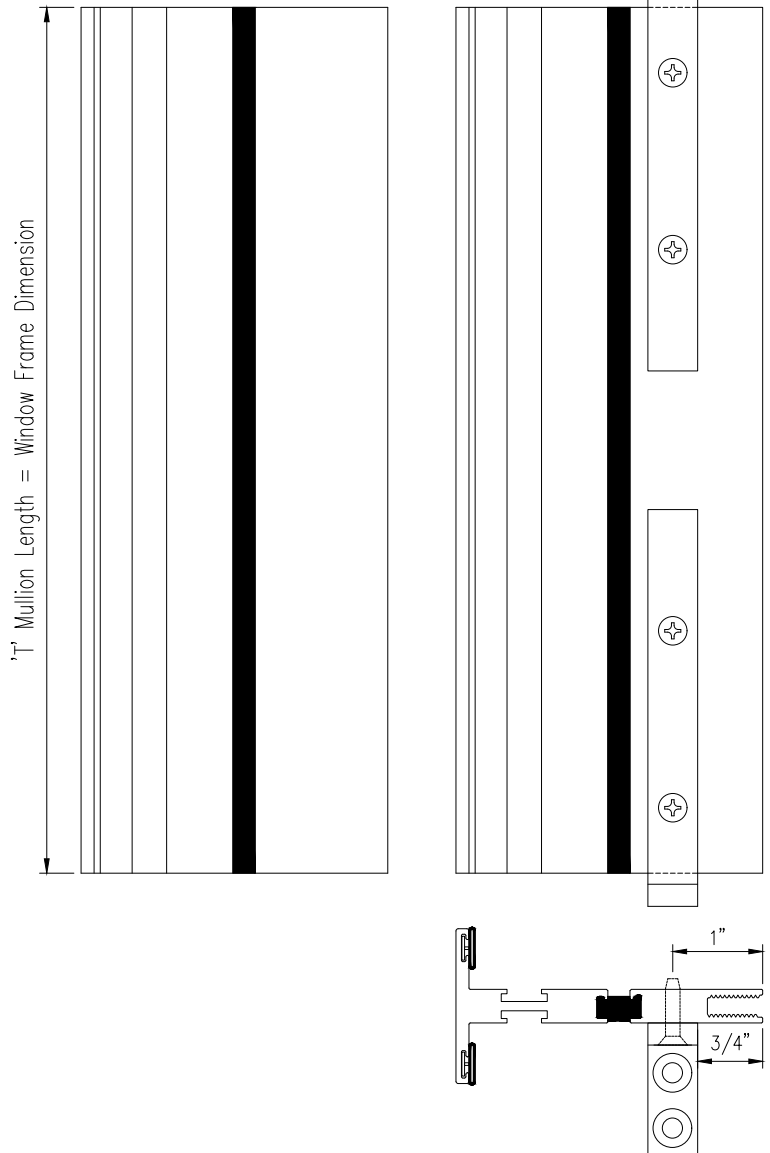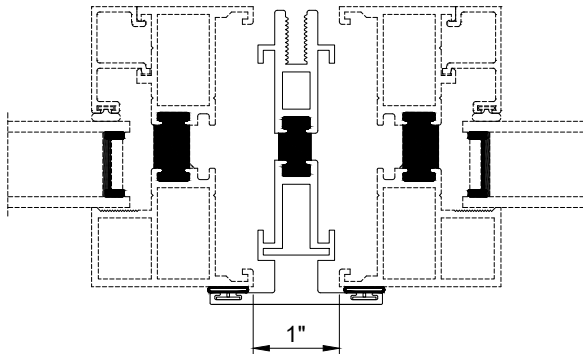


Apply a generous amount of sealant to the building structure where the Angle Clip and 'T' Mullion will sit (see dimensions below), and on the exterior leg of the 'T' Mullion as shown below. Then install the 'T' Mullion assembly against the window frame by sliding it into place from the exterior. Push firmly against the window frame as shown.

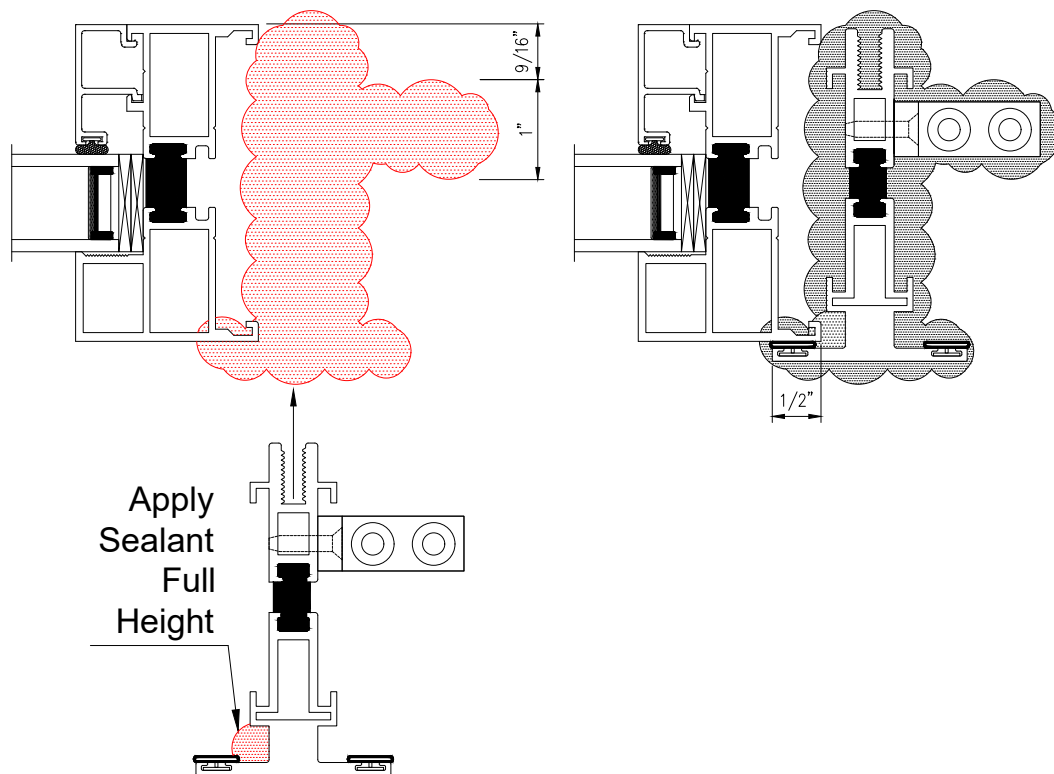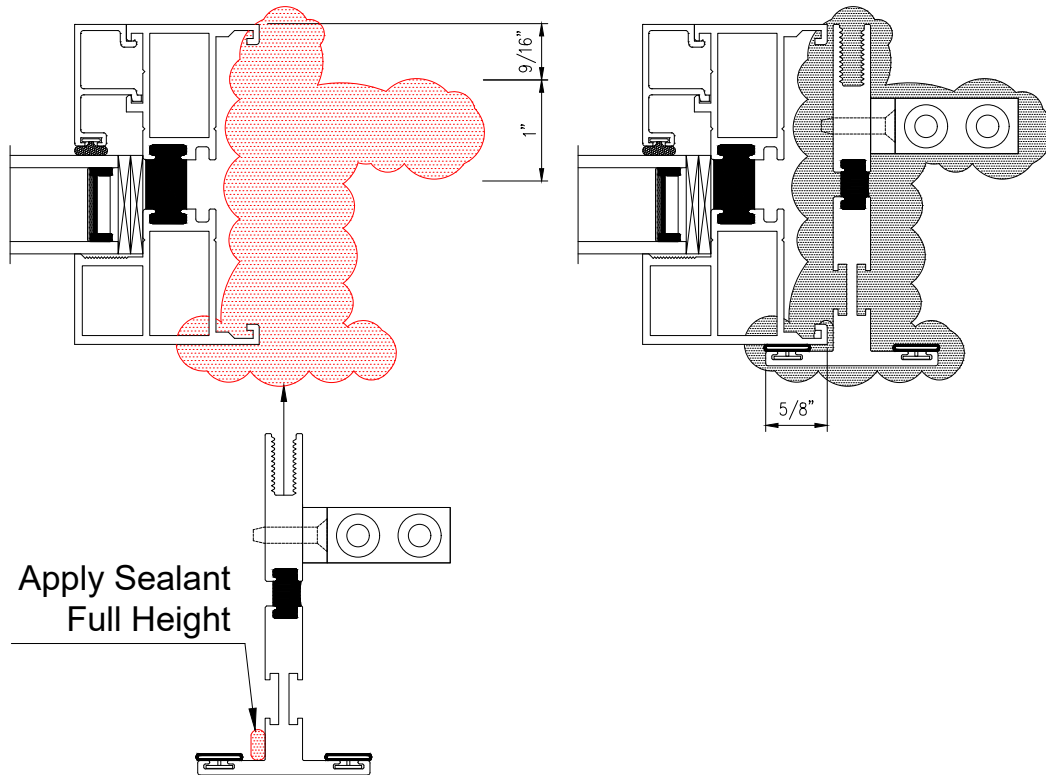


WB8

When positioned correctly, fasten the Angle Clips in place. Securely seal the fastener heads at the sill Angle Clip and tool as needed. Sealing around the head Angle Clip and fasteners is optional.

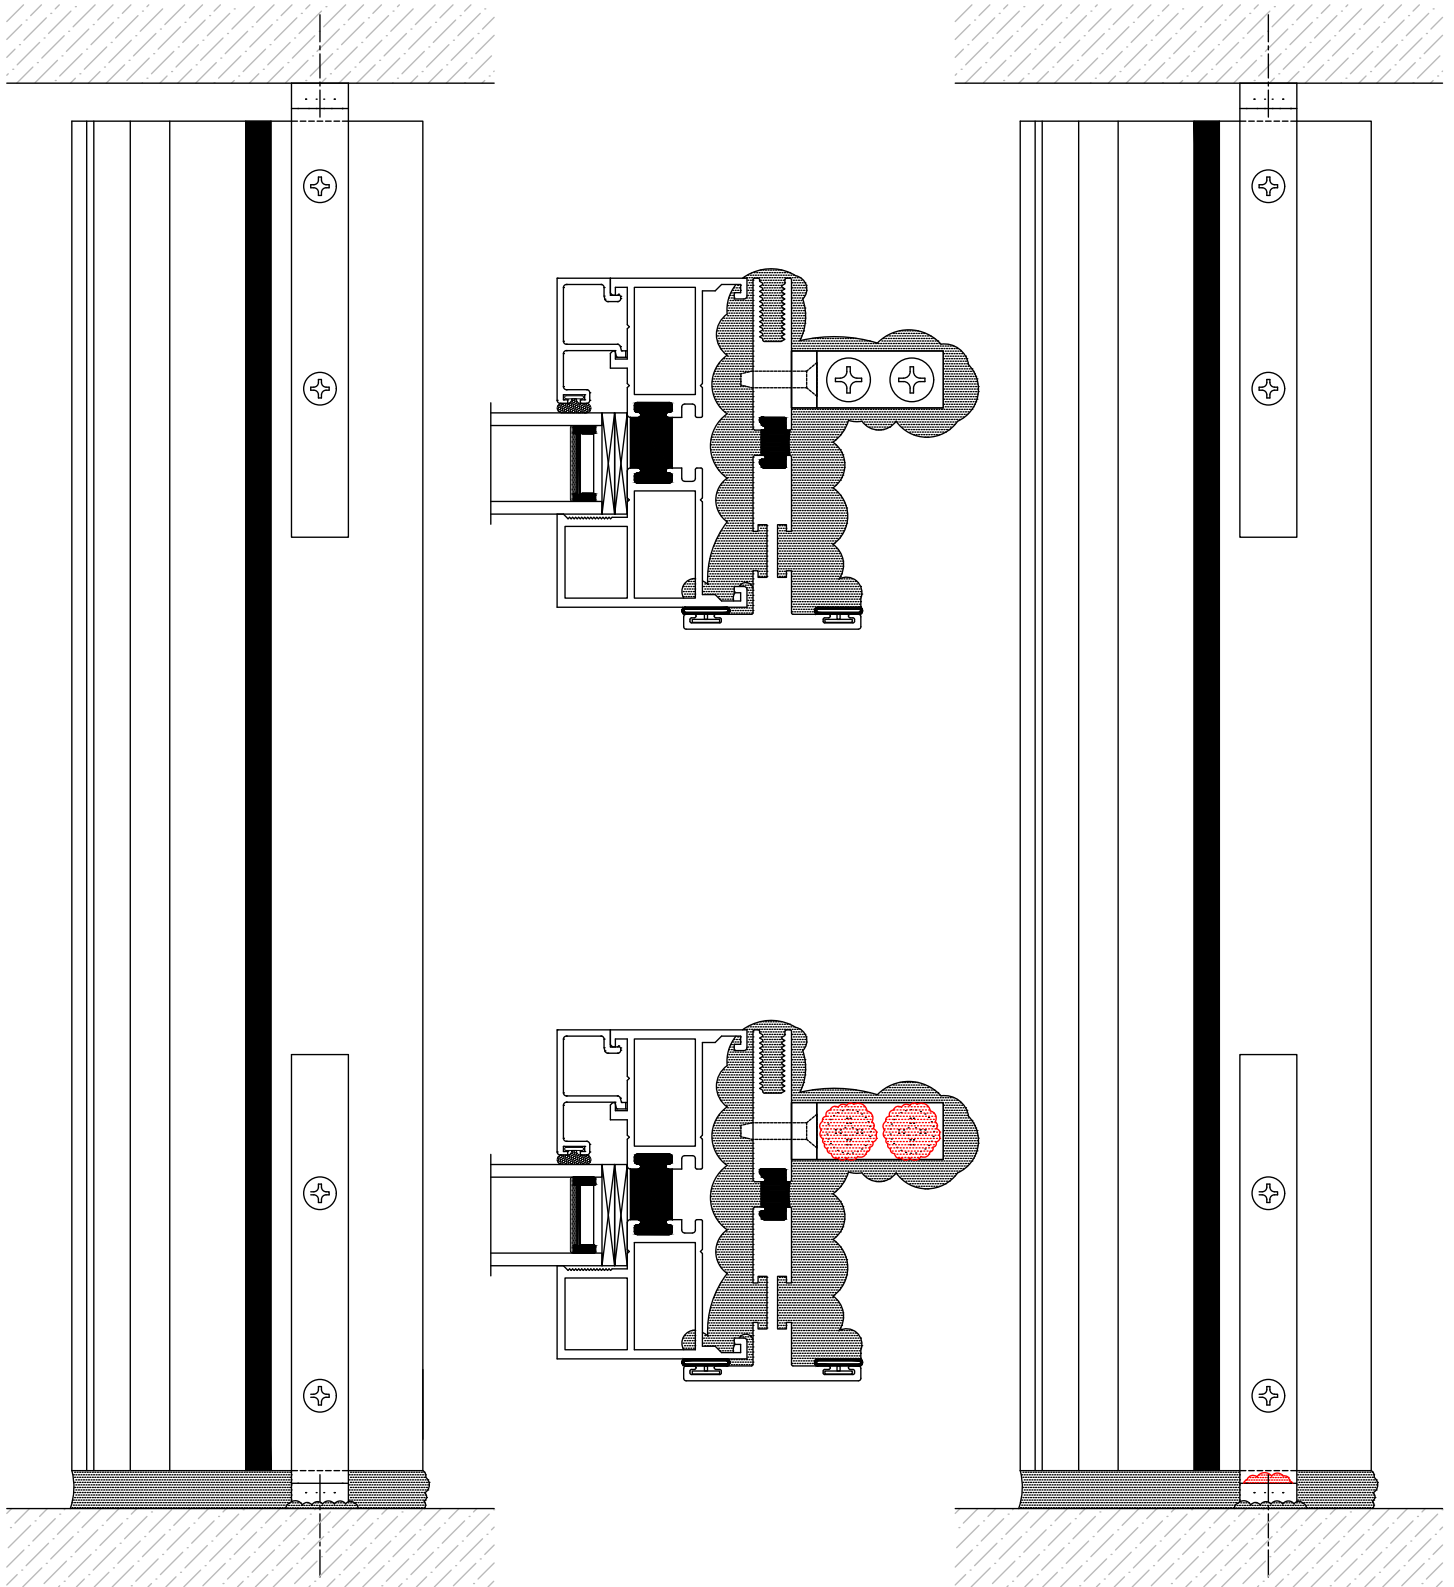


WB9

Before installing the remainder of the required clips, insert Insulation to the head and jambs (not required at the sill).

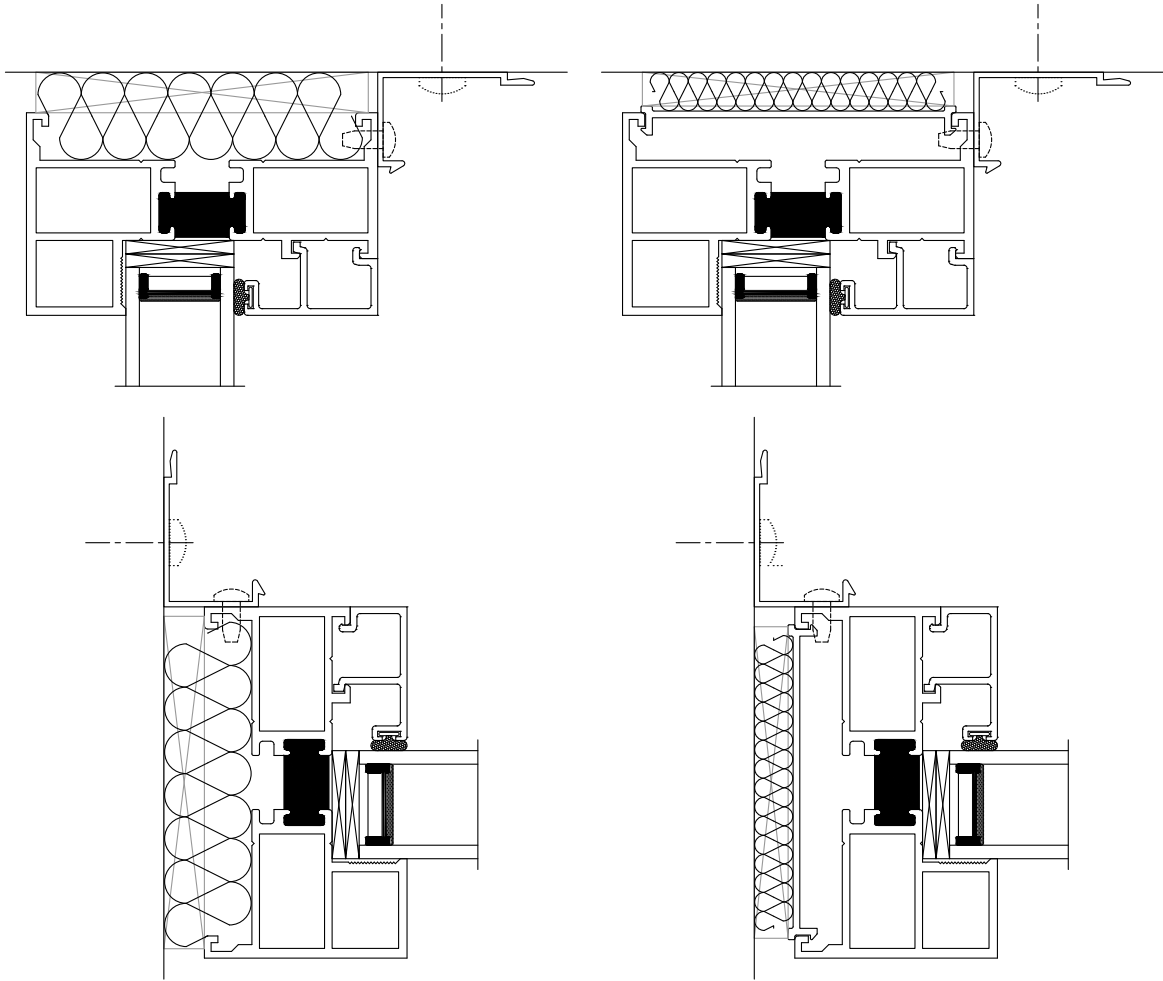


WB10

After inserting the insulation and before installing the remainder of the required clips, insert backer rod and apply a continuous bead of sealant at the interior only. Make sure the sealant is applied behind the clips that are already in place.

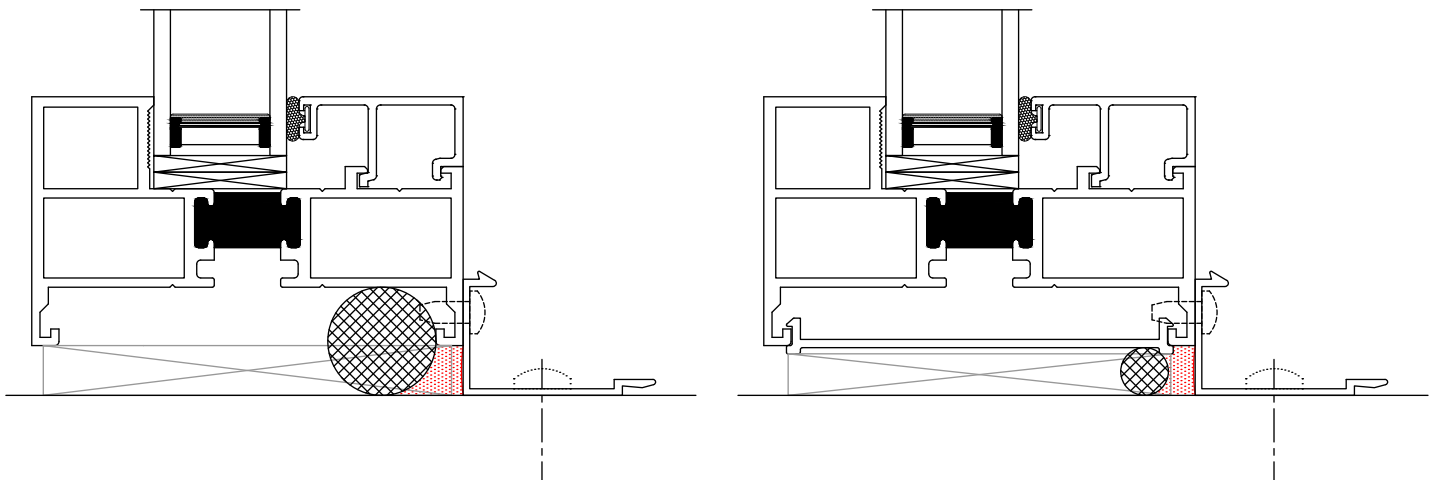


WB11

Install the remaining required clips as required per the Shop Drawings or the Structural Calculations.

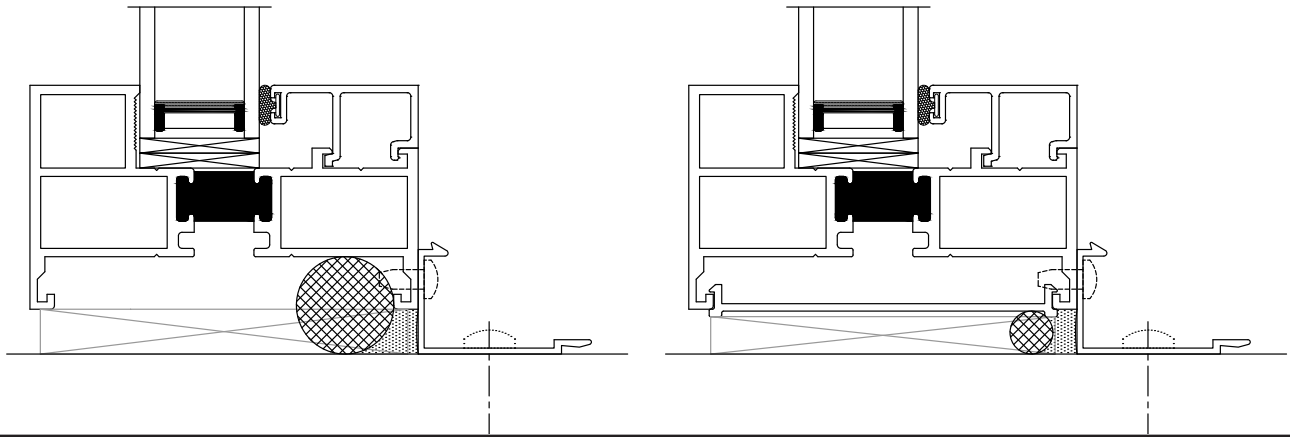

WB12

Before inserting the next window unit, apply a generous amount of sealant on the exterior leg of the 'T' Mullion as shown below.

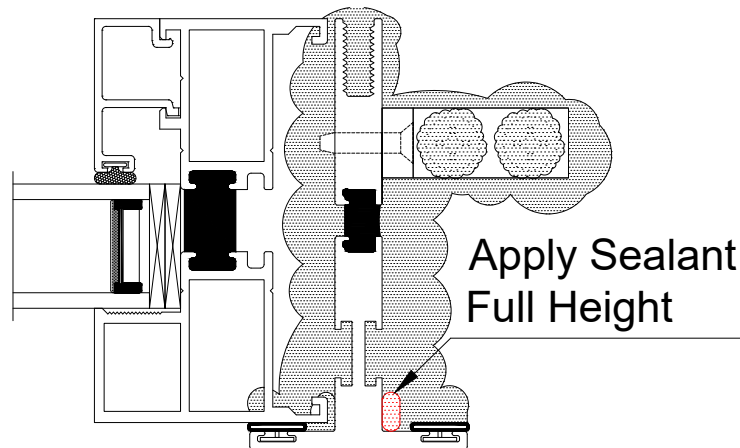


Refer to instructions WB4 and WB5 before install the next Window Frame. Install the next Window Frame assembly from the interior by angling it into the opening, and turning it into place.


Make sure to lift the frame over the 'T' Mullion Clips if needed.

Then refer to instructions WB9 through WB11 to complete installation of this Window Frame.


Repeat instructions WB4 through WB12 as needed to complete the installation in the opening.

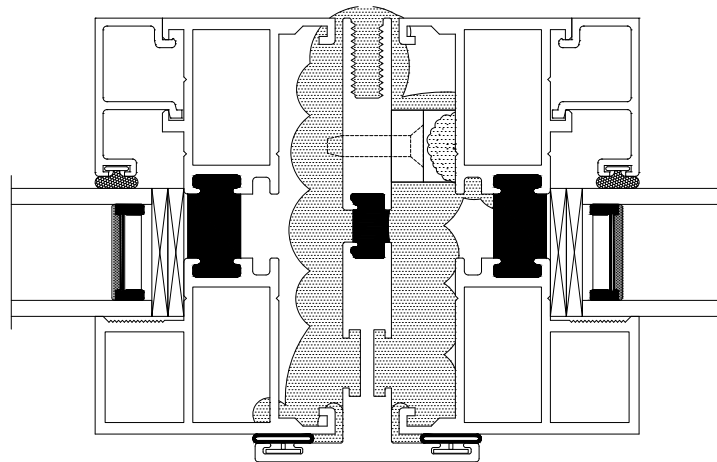

After unit is completely installed, snap the Trim Covers into place as shown below.

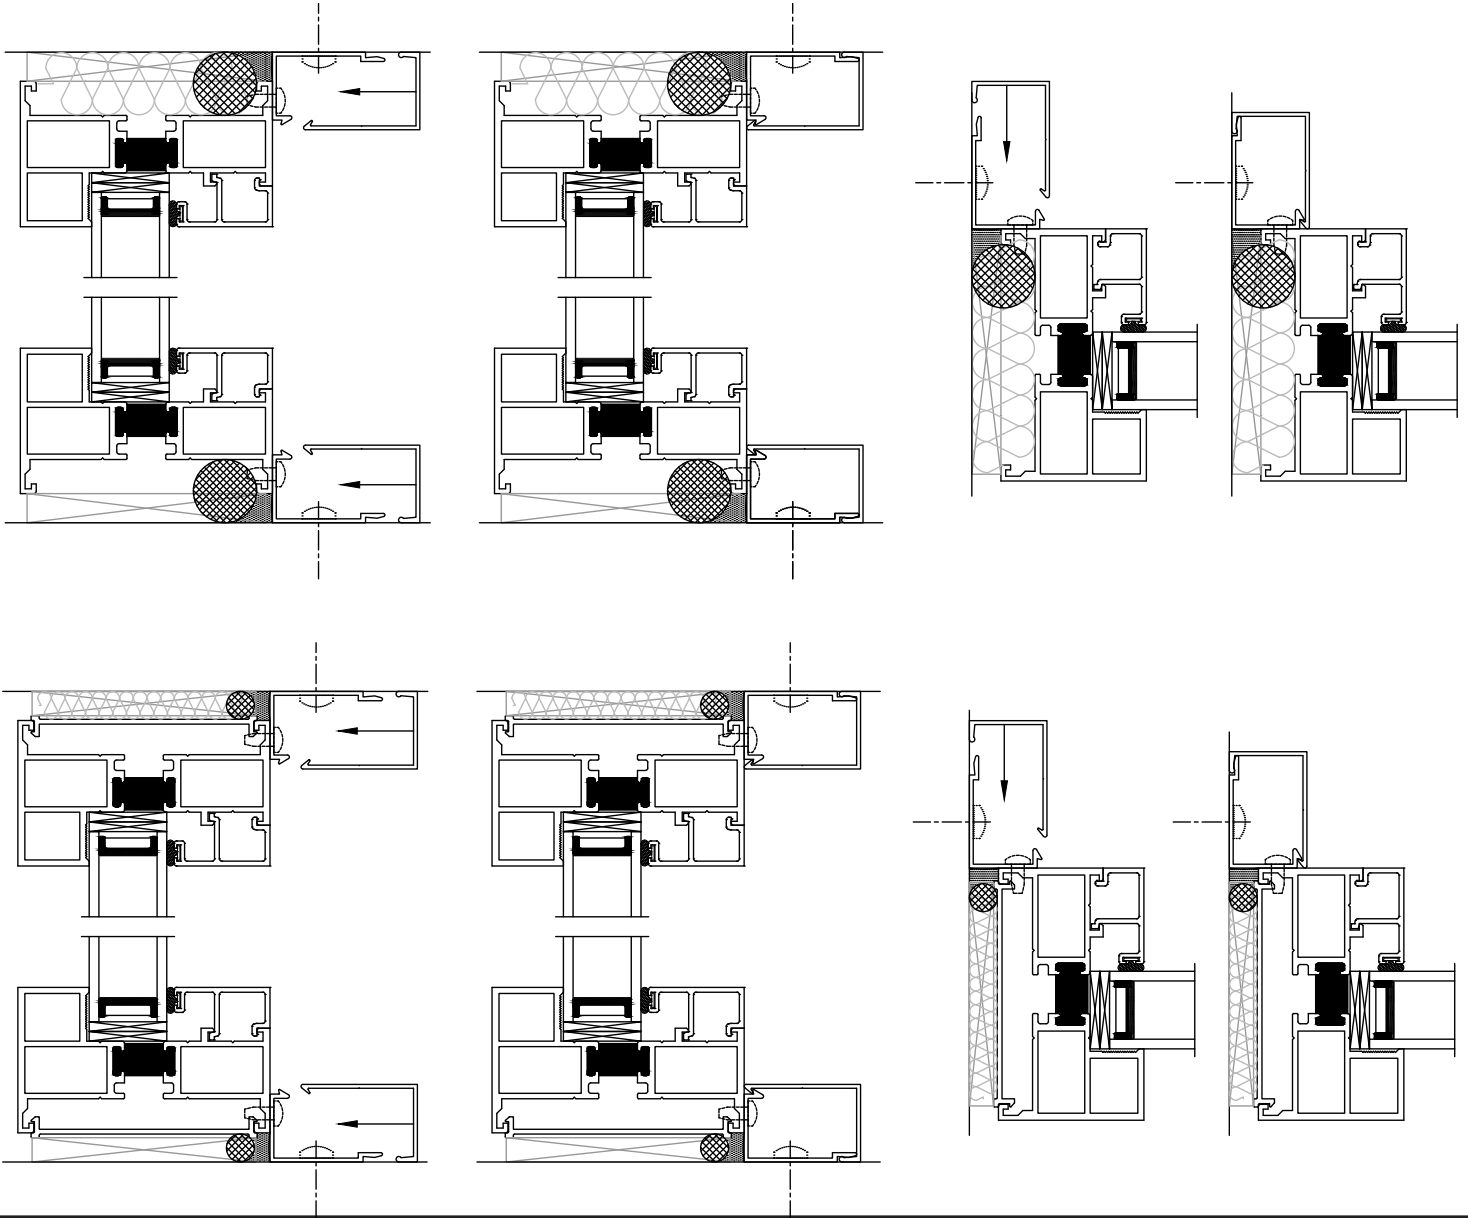

If not already done, cut the Pressure Plate and Cover per the drawing below.

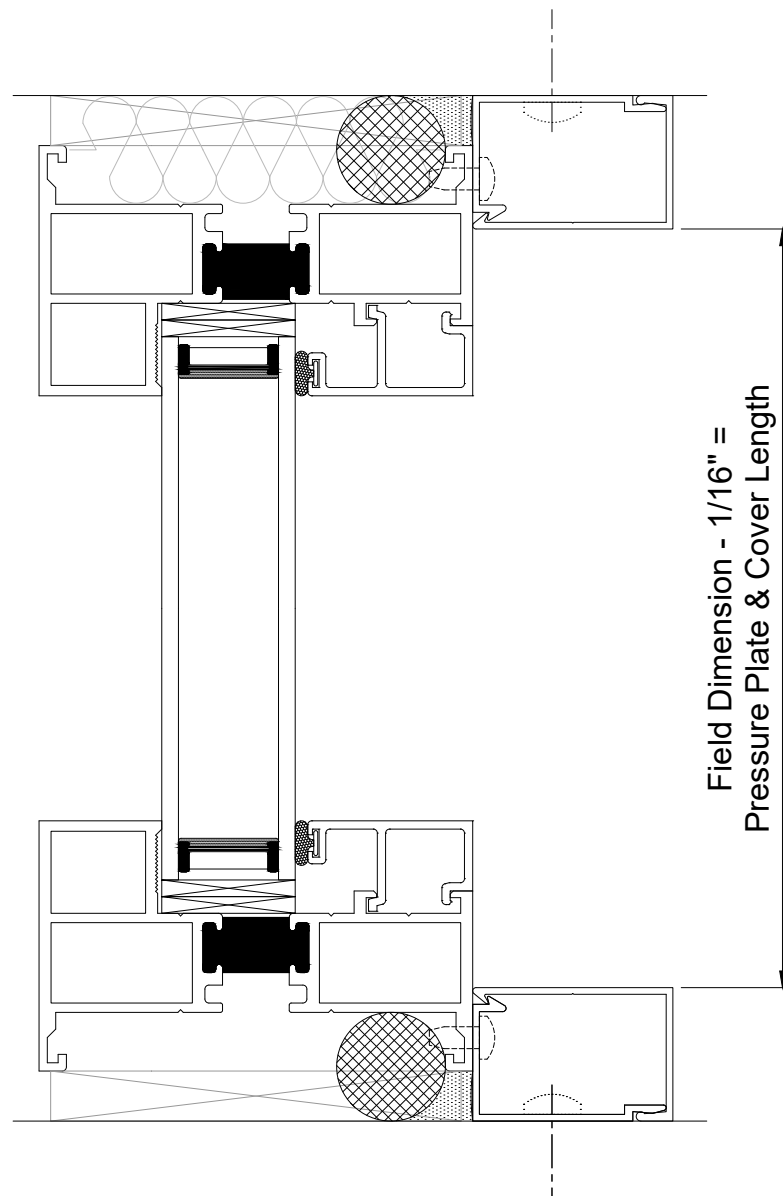


Fill the voids between the M22126 T-Mullion and the Window Frames with Minimally Expanding Foam. Do not do this on the M24628 T-Mullion.

Then apply sealant full height at the interior as shown below to both T-Mullions.


Apply the Pressure Plate with the supplied fasteners, 3" from the ends and 12" O.C. Tighten the fasteners to ensure a uniform seal of the weathering to the mullions.

After the Pressure Plates are in place, snap the on cover.

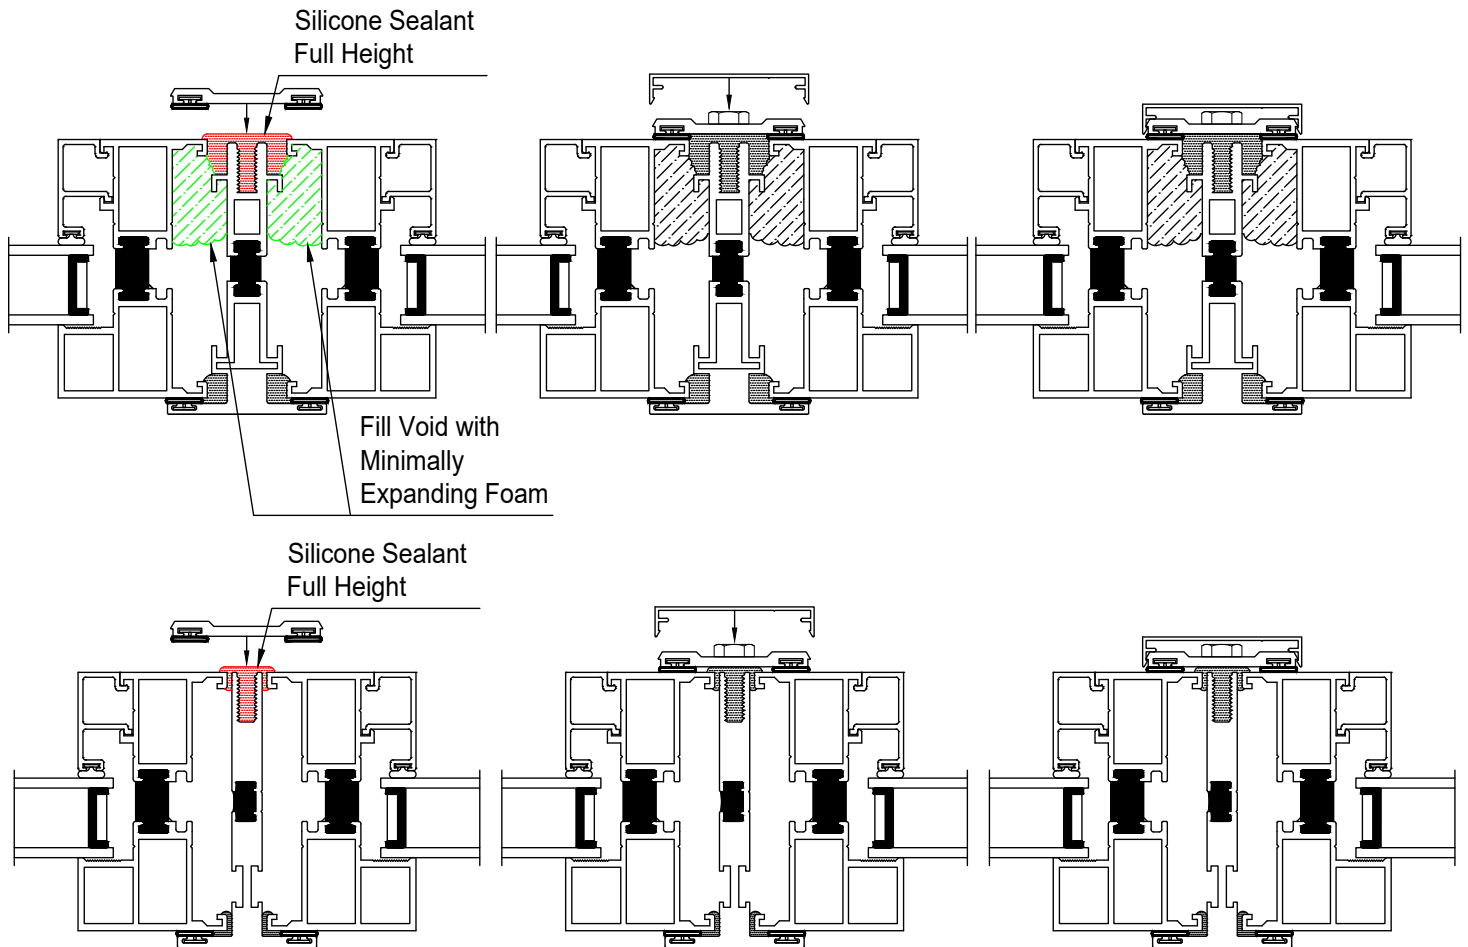


WB16

Refer to the Shop Drawings if additional flashing or other material is required. After exterior building construction is completed, install back rod, then apply a continuous bead of sealant around entire perimeter of window frame and tool in place. Interior sealant is optional, and not required.

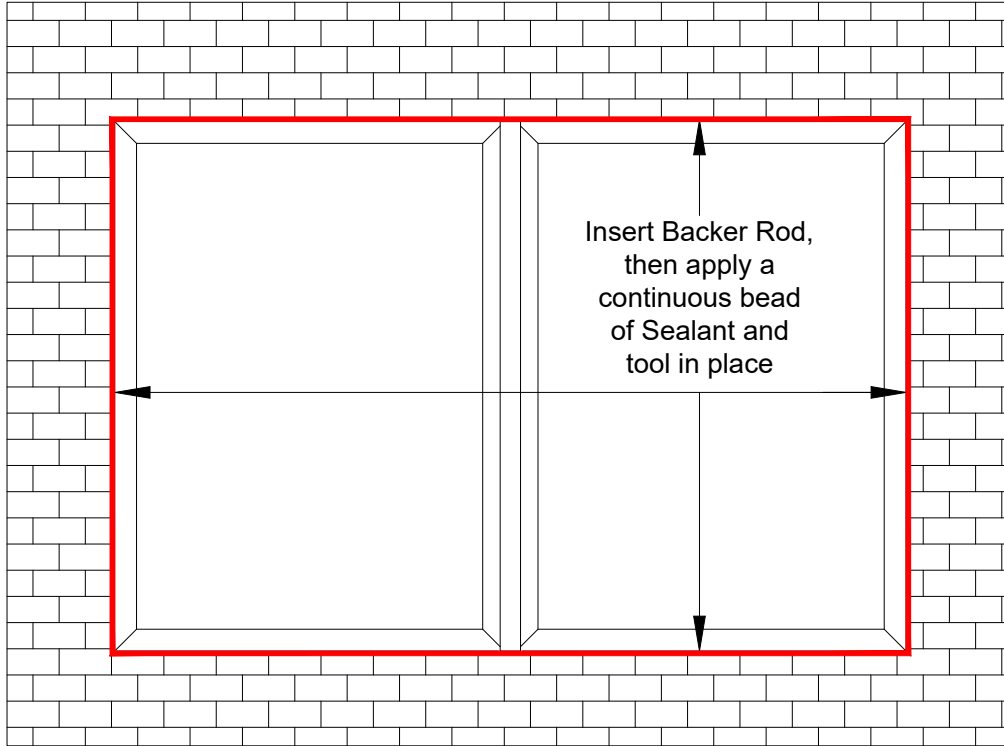

Note:

Installer to verify that Sealant being used is compatible with Quaker window frame and the surrounding building construction materials.


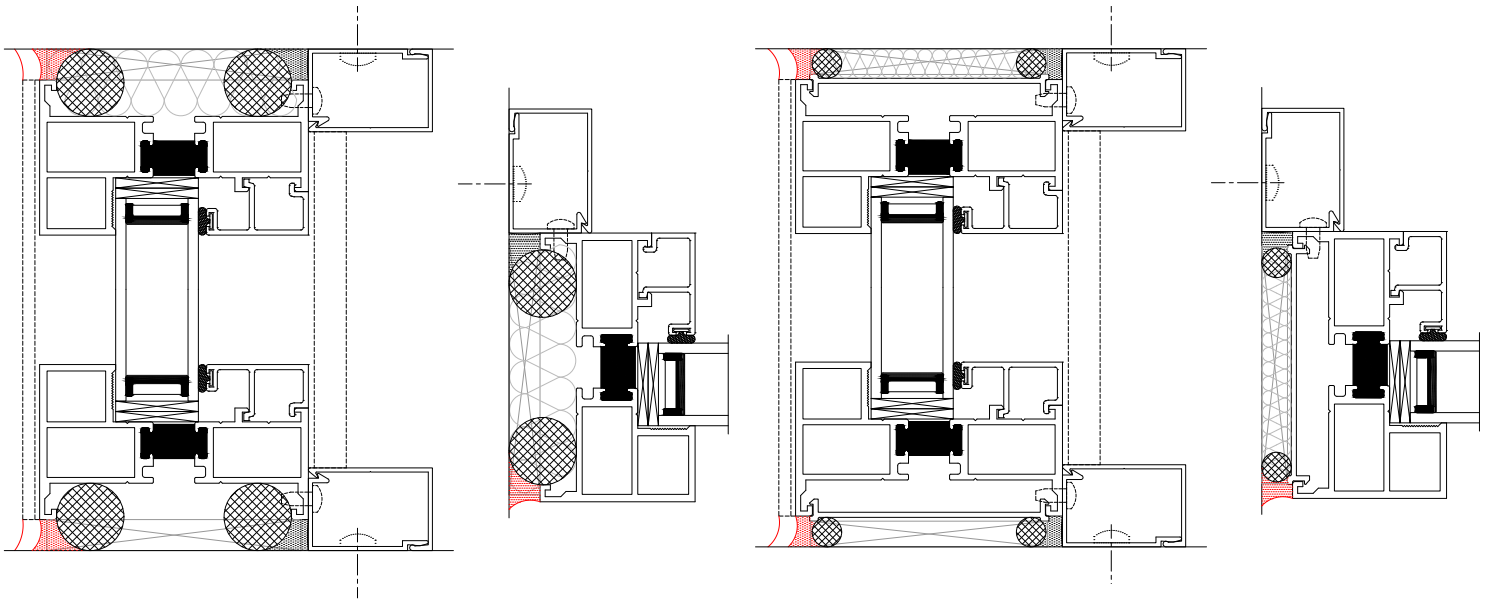


This Completes the Installation when Weather Resistant Barrier is being used

With Liquid Barrier Application (LBA) (Pages 16-16)

LB1

After the initial LBA has been applied, from the interior measure and verify the size of the rough opening. The rough opening should be a 3/4" wider and 1/2" taller than the Window Unit, unless otherwise noted on the shop drawings. Verify the rough opening is flat, plumb, level, and square. Take diagonal measurements to check for square. The sill plate beneath the unit must be level for proper unit operation.

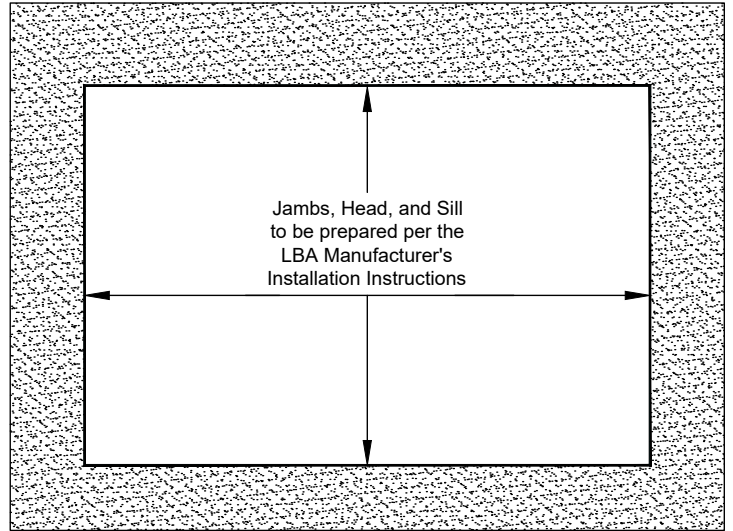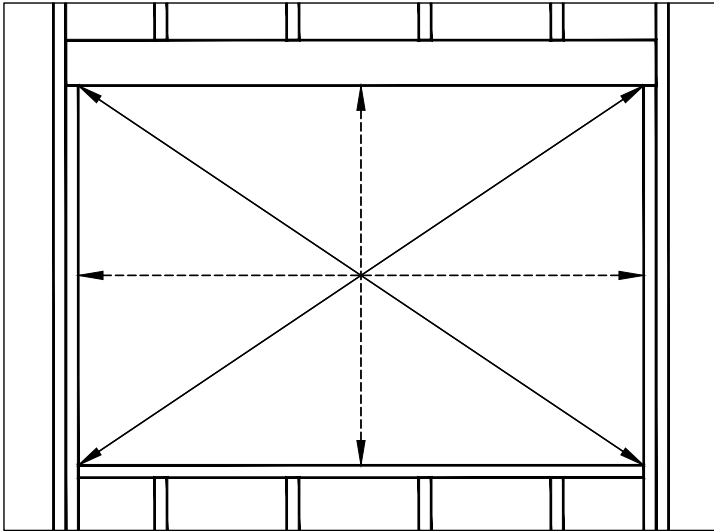

LB2

Refer to instructions WB4 to WB16 for the remainder of the Liquid Barrier installation.

This Completes the Installation when Liquid Barrier is being used